



# 7660 Tactical Fuel Gauge Installation


► Locate the Vent Pipe on the Collapsible Storage Tank (CST).

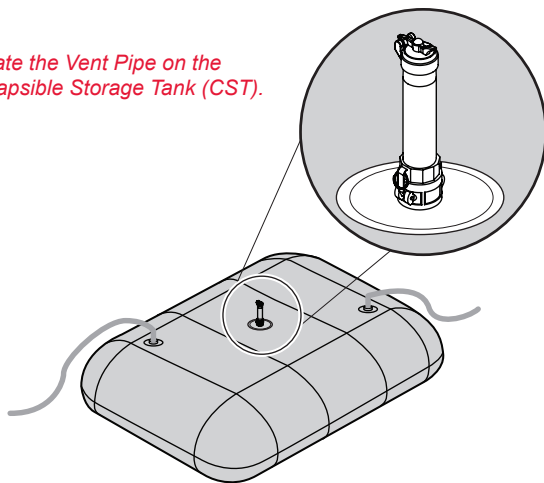


► Remove the existing Vent Pipe from the CST.

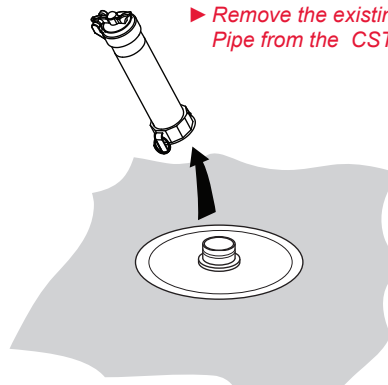


► Grasp Tactical Fuel Gauge (TFG), secure the sensor and ensure the sensor cable is free of kinks, twists or knots.

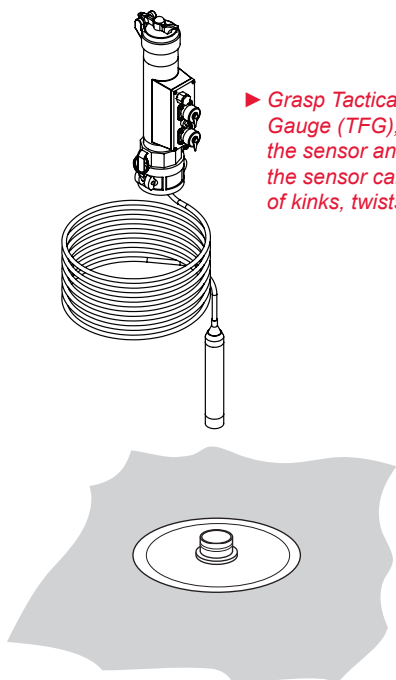

► Lift and tilt the vent opening to insert TFG sensor.

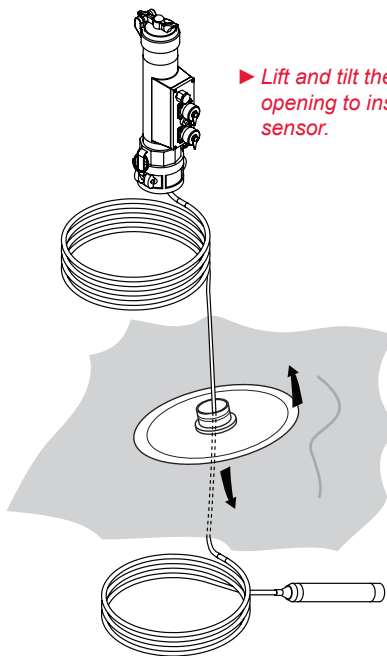


► Feed sensor and entire cable into tank and then attach TFG Vent Pipe to the CST.

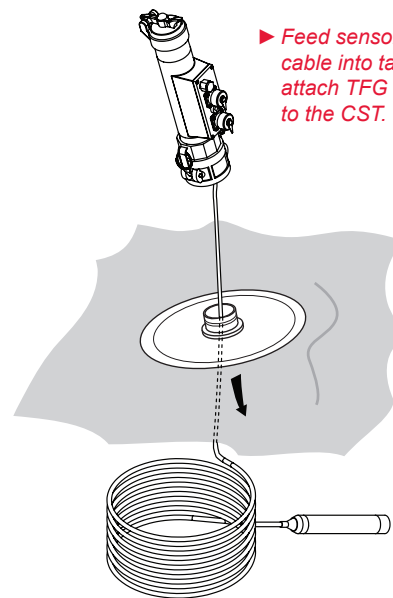


Note! Follow all applicable fuel farm safety procedures.

► Attach the TFG power and communications cable to the top quick disconnect input port

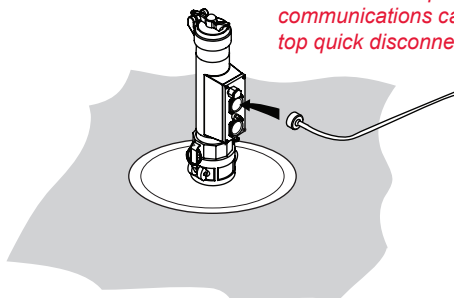


► To connect the TFG(s) in series - Connect the bottom output port of one TFG to the top input port of the next TFG.

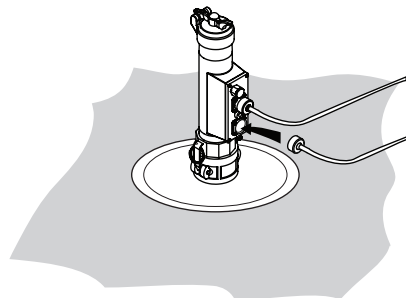


# 7660 Tactical Fuel Gauge Removal


► Locate the Tactical Fuel Gauge (TFG) on the Collapsible Storage Tank (CST).

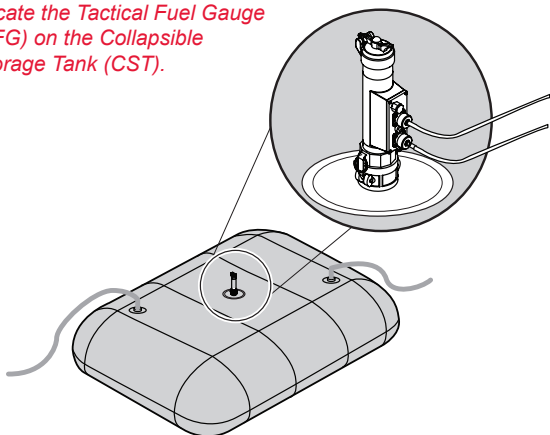


► Remove the power and communications cables.

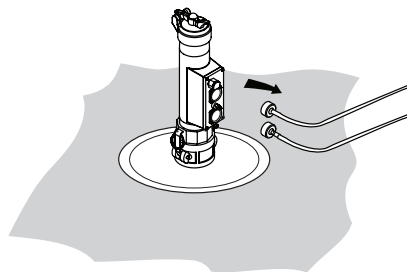


► Remove TFG carefully withdrawing the cable.

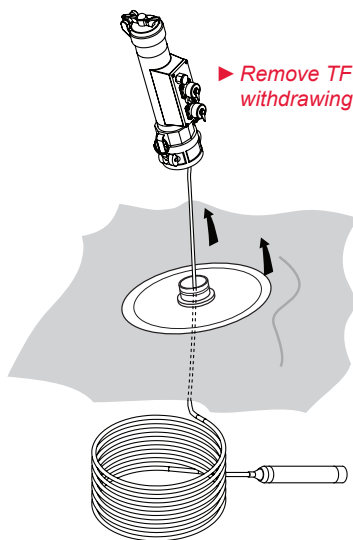

► Curl the TFG cable as you withdraw it from the CST.

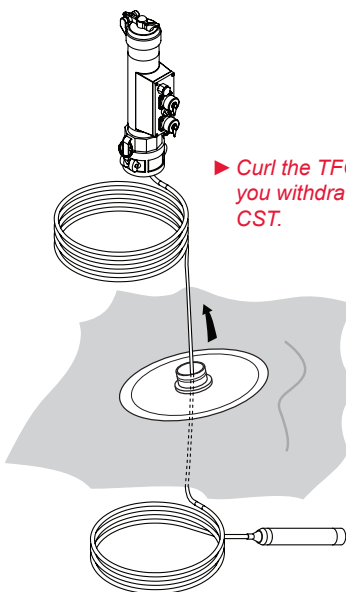

► Once the sensor reaches the Vent Plate gently remove the sensor

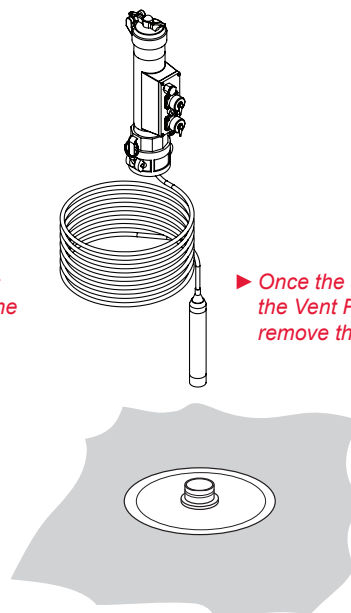

Note! Follow all applicable fuel farm safety procedures

► Replace the original Vent Pipe

